

OPERATING INSTRUCTIONS W1411

POWER ON

1. Power the unit up by switching On the side lights of the vehicle.
(*Leave the system for a minute to warm up*)

ZERO CALIBRATION

1. With the vehicle empty, raise the body into the correct weighing position.
(*This should be when the body is clear of the chassis*)
2. Make sure the Normal/Set switch is in the Normal position.
3. Adjust the **FINE ZERO** knob on the right hand side of the display into the centre position.
4. Remove the display front and adjust the **COARSE ZERO** pot shown, until the display shows 00.0

SPAN CALIBRATION

1. With the vehicle carrying a known weight, raise the body into the weighing position.
2. Make sure the Normal/Set switch is in the Normal position.
3. Remove the display front and adjust the **SPAN** pot shown, until the display shows the correct weight.

ZERO TRIMMING

1. If the display does not read zero when empty and in the weighing position, the **FINE ZERO** knob can easily be turned until the display shows 00.0



Picture showing the **SPAN/ZERO** pots inside the display